



**OPERATING MANUAL**

**VACUUM CASTING MACHINE**

**TYPE MCP 4/06**

UNIT 8 - WHITEBRIDGE INDUSTRIAL ESTATE  
STONE  
STAFFORDSHIRE ST15 8LQ  
ENGLAND  
TEL: +44 (0) 1785 815651  
FAX: +44 (0) 1785 812115

# MCP EQUIPMENT

UNIT 8, WHITEBRIDGE INDUSTRIAL ESTATE - STONE - STAFFORDSHIRE ST15 8LG  
ENGLAND

TEL. (+44) 01785 815651 - FAX. (+44) 01785 812115

Email: [equipment@mcp-group.co.uk](mailto:equipment@mcp-group.co.uk) - Web:



A DIVISION OF MINING & CHEMICAL PRODUCTS LTD.

*Thank you for choosing an MCP Vacuum Casting Machine.*

*The Type 4/06 is a dual chamber model, the vacuum chambers themselves being of stainless steel and powder coated mild steel for long life and ease of maintenance. As well as being used for the actual casting process, the machine may be used for degassing both the silicone rubber mixture from which moulds are formed, and the two component MCP resins used in the finished products. In dual use, the chambers are sealed from each other by two plates. These plates can be raised forming one compartment for the purpose of making larger castings.*

*The equipment is controlled by two programmable logic controller units (one for each chamber), which drive the resin mixing and pouring mechanisms as well as controlling the vacuum pumping and pressure release. The process can be visually monitored through four large inspection ports or, when necessary, by means of internal cameras with colour video display mounted on the machine.*

*Please follow carefully the instructions for installation and use that are to be found in this Operating Manual, which also covers routine checks and adjustments. For machine service information please contact your nearest MCP office.*

*A further Manual, VACUUM CASTING TECHNIQUE, gives an overview of the system. A copy is supplied with every machine.*

## HEALTH AND SAFETY

*All units supplied on or after 1<sup>st</sup> January 1995, bear the CE mark. The Declaration of Conformity will be found at the end of this Manual.*

### ELECTRICAL SAFETY

*Certain of the tasks described in this manual require access to the electrical control enclosure, and should therefore be carried out only by a suitably qualified person.*

### MATERIALS SAFETY DATA

*Though no special hazard is likely when they are used in accordance with the suppliers' recommendations, each of the materials used in the process is the subject of a Safety Data Sheet, supplied at the time of first purchase and giving information in conformity with both European Directive 91/155/EEC and (in the United Kingdom) the Consumer Protection Act 1987.*

### NOISE

*The equivalent continuous A-weighted sound-pressure level during working of this machine does not exceed 80dB(A).*

# CONTENTS

---

	<b>Page</b>
INSTALLATION	8
Weight and dimensions	
Power requirements	
Siting the machine	
Installation sequence	
Pre-Operating Checks	9
SAFE WORKING PRACTICE	10
SELECTING 4/04 OR 4/06 MODES	12
PREPARATION FOR CASTING	13
Preparing the mould and flow-system	
Preparing the resin	
Fitting the cups and paddle	
WORKING PROCEDURES	14
To make the machine ready for use	
Operating modes / Control Panel Touch Screen Functions	
Operating in manual mode	
Using the automatic operating sequence	
Stopping in emergency	
Re-starting after emergency	15
Shutting down	
CONTROL PANEL TOUCH SCREEN FUNCTIONS	16
Manual functions	
Auto functions	
APPENDIX	25
ROUTINE MAINTENANCE PROCEDURES	28
DECLARATION OF CONFORMITY	29
<i>Illustrations</i>	
<i>Fig. 1</i> <i>General front view</i>	3
<i>Fig. 2</i> <i>Control Section Front Access Door</i>	4
<i>Fig. 3</i> <i>Inner Door Control Panel at Rear</i>	5
<i>Fig. 4</i> <i>Vacuum Pump Access (at each side of machine)</i>	5
<i>Fig. 8, 9, 10</i> <i>Operating Inner Door Controls</i>	12
<i>Standard accessories:</i> <i>Illustrations and Part Numbers</i>	6-7

# VACUUM CASTING MACHINE

TYPE MCP 4/06

---



*Fig. 1* General front view

# VACUUM CASTING MACHINE

## TYPE MCP 4/06

---




*Fig. 2* Control Section Front Access Door

# VACUUM CASTING MACHINE

## TYPE MCP 4/06







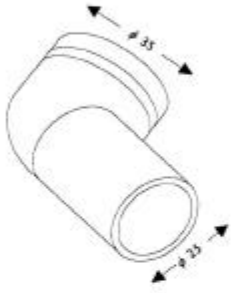

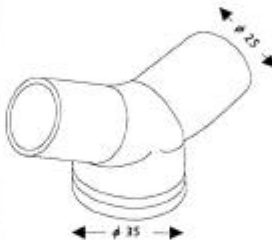


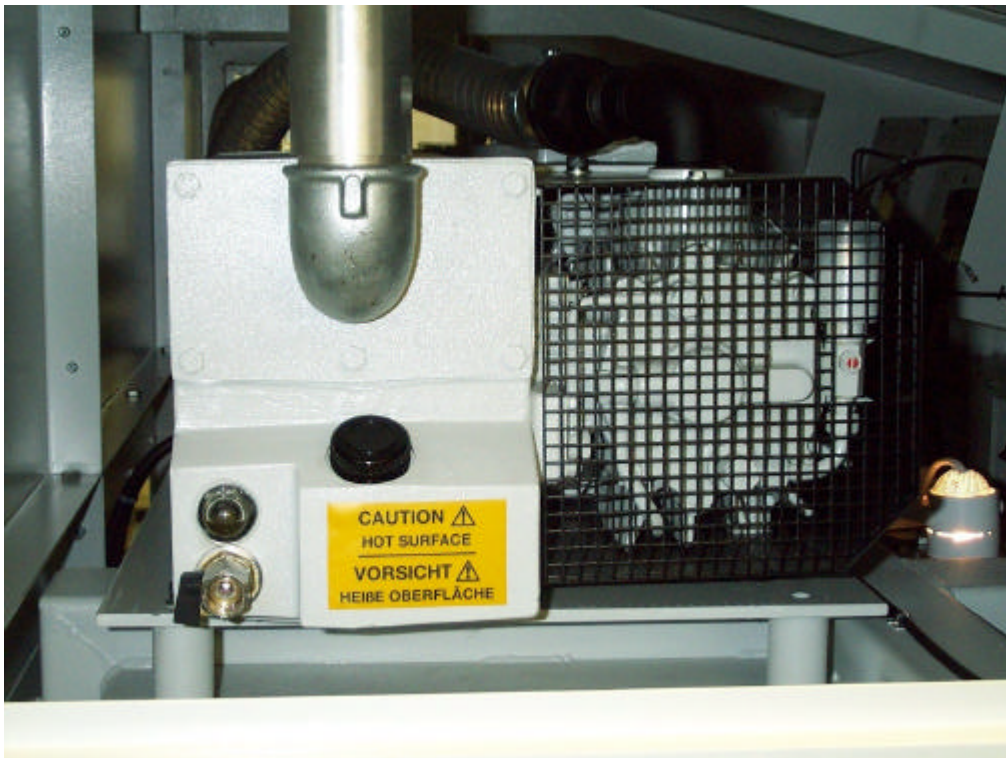






*Fig. 3* Inner Door Control Panel at Rear

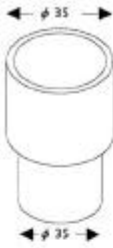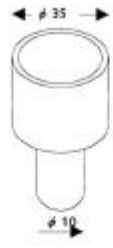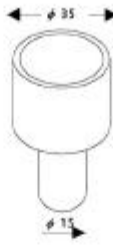

*Fig. 4* Vacuum Pump Access (at each side of the Machine)






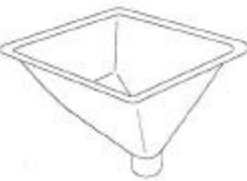




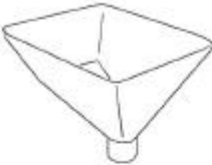



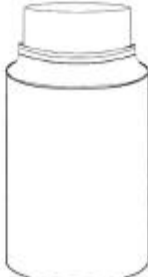

# STANDARD ACCESSORIES RANGE

(████ NOT AVAILABLE FOR MCP 4/06)

<p>Hose joint 35/26 Re-order no. 831.00203</p> 	<p>Hose joint 35/20 Re-order no. 831.00202</p> 	<p>Hose joint 20/10 Re-order no. 831.00201</p> 	<p>Hose joint Y-16/16/35 Re-order no. 831.00204</p> 
<p>Hose joint 36/25 Re-order no. 831.00109</p> 	<p>Hose joint 25/25 Re-order no. 831.00110</p> 	<p>Hose joint Y/25/25/35 Re-order no. 831.00108</p> 	 <p>300 cc</p>
 <p>1000 cc</p>	 <p>1000 cc</p>	 <p>1000 cc</p>	<p>Two-litre cup Re-order no. 831.00207</p>  <p>2000 cc</p>
<p>Cup liner (two litre) Re-order no. 831.00208</p> 	<p>Five-litre cup Re-order no. 831.00105</p>  <p>5000 cc</p>	<p>Cup liner (five litre) Re-order no. 831.00111</p> 	<p>Funnel no. 2 Re-order no. 831.00206</p> 

## STANDARD ACCESSORIES RANGE

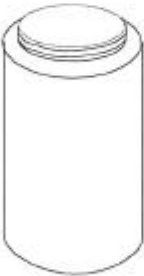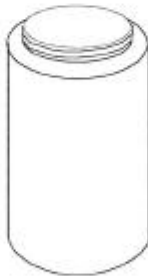(████ NOT AVAILABLE FOR MCP 4/06)

<p>Funnel liner (no. 2) Re-order no. 831.00209</p> 	<p>Funnel no. 5 Re-order no. 831.00107</p> 	<p>Funnel liner (no. 5) Re-order no. 831.00112</p> 	
<p>Paddle no. 2 Re-order no. 831.00205</p> 	<p>Paddle no. 5 Re-order no. 831.00106</p> 	<p>Mould opener Re-order no. 831.00214</p> 	<p>Mould opener (with ratchet) Re-order no. 831.00215</p> 
<p>Resin pigment 200gm (Special order by colour)</p> 	<p>Resin pigment 1 kg (Special order by colour)</p> 	<p>Resin pigment (black) 1 kg Re-order no. 832.40007</p> 	<p>Silicone release agent Re-order no. 831.00014</p> 
<p>Silicone-free release agent Re-order no. 802.00033</p> 	<p>Pattern lacquer spray Re-order no. 802.00034</p> 	<p>Pattern release agent (green) Re-order no. 802.00032</p> 	<p>Pattern sealant Re-order no. 802.00031</p> 



# INSTALLATION

---

## WEIGHT & DIMENSIONS

- \* Weight:                                      Nett weight 4000kg                                      Shipping weight: 4200kg  
External dimensions (mm): 2550 high x 1510 wide x 900 front-to-back.

## POWER REQUIREMENTS

- \* The unit requires a three-phase, 415 volt supply, with switch capacity 32 amp and an overload breaker rated for 40 amp.
- \* An earthing point and a circuit-breaker must be provided.

## SITING THE MACHINE

- \* Do not site the unit in an area subject to excessive heat or high humidity.
- \* Choose a well-ventilated area. If possible, provide local exhaust ventilation to an outside vent.
- \* Avoid areas exposed to dust or vibration.
- \* Ensure that the unit is level, and that the feet are locked.
- \* For ease of access in servicing, you are recommended to leave a clear space of at least one metre to the rear of the machine and at least two metres at the front and sides. Side clearance is needed to allow the floor plates to be fitted or removed.

### **INSTALLATION SEQUENCES**

*Installation is divided into two phases. Physically locating the machine and connecting it to the electrical supply is followed by a series of tests and the set-up procedures necessary to ensure correct operation.*

*Before beginning installation, please read through the instructions and ensure that you can identify each of the parts referred to.*

*Electrical connections should be made only by an appropriately qualified person.*

PRE-OPERATING CHECKS

*NB: if any of the following checks should fail, consult the manufacturer immediately.*

1. Remove the panel at the rear of the machine covering the two inner door motors and the motor control equipment. Locate the 'Phase Rotation' detector unit located at the top centre of the plate to the left of two black fuse holders.
2. Switch on the power at the main isolator at the top right-hand side the machine, the PLC is now operational. Press the blue 'Reset' pushbutton mounted in the front, centre of the control panel. Both video display screens should now be operational and both vacuum chambers should be illuminated.
3. Check the 'Phase Rotation' detector. If an amber LED is illuminated the 3phase supply is correct. If, however it is not lit, then you will need to ask for the connected supply to have two phases changed over. This should only be carried out by a suitably qualified electrical engineer. Once this has been done the rear panel can be re-fitted.
4. Check that the Inner Doors are not obstructed by any items inside the lower chambers. Once this has been checked, the Inner Doors can be safely operated. If the doors are in the lowered position and the DOWN pushbutton is pressed, the white 'DOWN' lamp on the front of the machine should illuminate. To raise the doors, simply press and hold the green 'UP' pushbutton until both doors are fully raised and the green lamp is illuminated. Note that the lamps are only illuminated when the relevant pushbutton is pressed.
5. Open each vacuum pump access panel. Check the oil level and, if necessary, fill the vacuum pumps to the level indicated by a market on the sight glass using the oil supplied. Close the access panels.
6. Each pump can now be run to check operation. It should be remembered that the pumps should not be run with the chamber doors open as this will result in excess wear.



Rear Inner Door Control panel showing Phase Rotation Detector Unit

# SAFE WORKING PRACTICES

---

Users of equipment should satisfy themselves that they comply with the requirements of the relevant legislation within the United Kingdom (or equivalent regulations within the country of use).

Particular attention is drawn to the following:-

- Health and Safety at Work etc. Act 1974;
- Personal protective Equipment at Work Regulations 1992;
- Provision and Use of Work Equipment Regulations 1998;

## Provision and Use of Work Equipment Regulations

In general terms, the Regulations require that equipment provided for use at work is:

- Suitable for the intended use;
- Safe for use, maintained in a safe condition and, in certain circumstances, inspected to ensure this remains the case;
- Used only by people who have received adequate information, instruction and training; and;
- Accompanied by suitable safety measures, e.g. protective devices, markings and warnings.

## Personal Protective Equipment

Users should be aware of the requirements of the Personal Protective Equipment at Work Regulations 1992 when providing equipment.







The main requirements of the PPE at Work Regulations 1992 is that personal protective equipment is to be supplied and used at work wherever there are risks to health and safety that cannot be adequately controlled in other ways.

Because the effectiveness of PPE can easily be compromised, e.g. by not being worn properly, it should always be considered as a last resort and only used where other precautions cannot adequately reduce the risk of injury.

Even where engineering controls and safe systems of work have been applied, some hazards might remain. In considering methods of safeguarding machinery the use of personal protective equipment may be used to minimise the risk of injury. This includes the need for special clothing, including footwear, hearing, eye and respiratory protection.

The guidance shown below may be used to consider the risks which may or may not be present. The user should make his own assessment of risks depending upon the circumstances of use.

## SAFE WORKING PRACTICES CONTINUED

	<b>Hazards</b>	<b>Options</b>
<b>HANDS</b> 	Abrasion; Temperature extremes; cuts and punctures; impact; chemicals; skin irritation.	Gloves, gauntlets  Notes: <ul style="list-style-type: none"> <li>• Don't wear gloves when operating machines where gloves might get caught.</li> <li>• Care in selection is needed.</li> </ul>
<b>EYES</b> 	Chemical or metal splash; dust; projectiles.	Spectacles, goggles, visors.  Notes: <ul style="list-style-type: none"> <li>• Make sure the eye protection chosen has the right combination of protection for the task.</li> </ul>
<b>FEET</b> 	Wet; slipping; falling objects; heavy loads; metal and chemical slash	Safety boots and shoes.  Notes: <ul style="list-style-type: none"> <li>• Consider conditions of use.</li> </ul>
<b>BODY</b> 	Heat; chemical or metal splash; spray from pressure leaks; impact; entanglement of own clothing.	Conventional or disposable overalls, aprons.  Notes: <ul style="list-style-type: none"> <li>• Consider choice of materials in relation to the chemicals involved.</li> </ul>
<b>RESPIRATORY</b> 	Dusts; gases and vapours.	Disposable respirators, half masks or full face masks, powered respirators.  Notes: <ul style="list-style-type: none"> <li>• The right type of respiratory must be used for the substance being handled.</li> </ul>
<b>HEARING</b> 	Impact noise; intensities; pitch.	Ear plugs or defenders.  Notes: <ul style="list-style-type: none"> <li>• See Noise at Work Regulations 1989.</li> </ul>

NOTE: Use personal protective equipment only as a last resort. Wherever possible engineering controls and safe systems of work should be used instead. All those required to wear protective equipment should be given training in its proper use, care and maintenance.

## SELECTING 4/04 OR 4/06 MODES

The machine can be operated in two main modes; 4/04 Mode where each chamber behaves independently from the other, or 4/06 Mode in which both chambers act as one, either with the chamber dividers in place or removed to allow for larger moulds and capacities.

Each mode is described in full below.

### 4/04 Mode

From the main menu screen (Fig. 5) select 004/006. This displays the screen shown in Fig. 6. From here, select the button marked 4/04. Once selected, the screen will display the opening title screen.

The machine is in 4/04 Mode. Each chamber can now be operated fully independently from the other. Refer to the section "Working Procedures" on page 14.

### 4/06 Mode

The user must first decide which side will be the Master unit, as this will become the screen from which all operations will be controlled. Once again, from the main menu page, select the MODE button. When the selection screen is displayed, press the button marked 4/06. This will be confirmed by on Slave screen by displaying a confirmation screen shown in Fig. 7. The Master screen will then display the main title screen.

Once 4/06 Mode has been selected the Slave chamber will mimic all the actions of the Master chamber.

Once the machine has been put into 4/06 Mode, the user has the option to open the chamber inner doors allowing the casting of larger moulds.

To open the inner doors;

1. Ensure that there is no vacuum within either chamber as this can cause an overload in the door opening control.
2. Press and hold the 'UP' pushbutton mounted below the screens in the centre of the control section (Fig 8).
3. When the pushbutton illuminates the doors are fully open.
4. If required, the two hoists can be removed and replaced with the roller bed for each of the chamber sections (left, middle & right). These roller beds can be stored below the machine when not in use.

If the doors need to be lowered, reverse the above procedure, remembering to remove the roller beds to prevent damage.

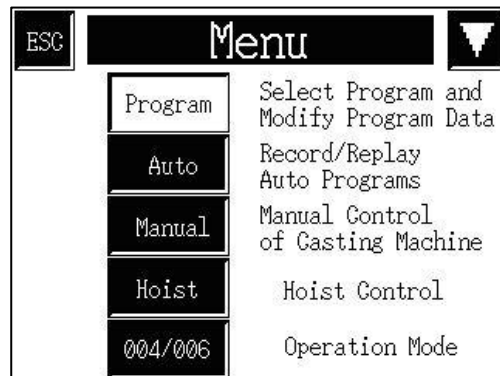


Fig. 5

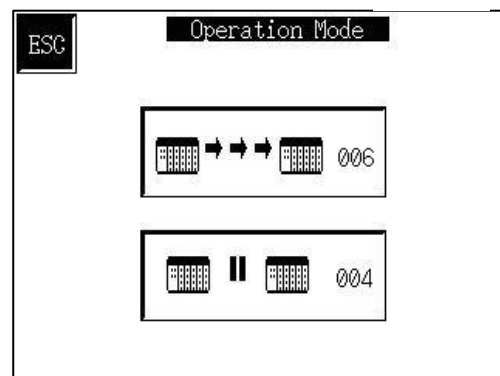


Fig. 6

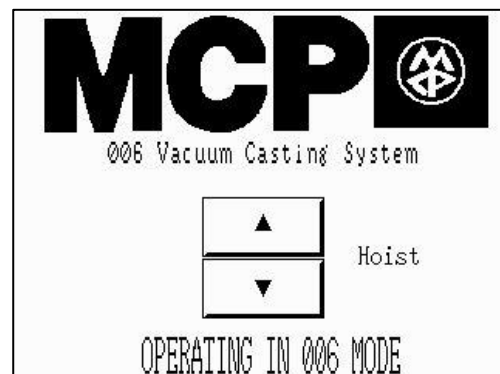


Fig. 7



Fig. 8



Fig. 9



Fig. 10

## PREPARATION FOR CASTING – 4/04 MODE

The sequence of operations (explained in general terms in the companion Manual *VACUUM CASTING TECHNIQUE*) requires the resin component cups, the whisk for mixing, a funnel and hoses all to be put correctly into place above the entrance gate(s) to the mould.

### PREPARING THE MOULD AND FLOW-SYSTEM

The standard accessory range includes several joints (see page 6), which may be employed in conjunction with clear plastic hose to direct the mixed resin into the mould, with the flow being spilt through Y-joints if need be.

Fit the funnel (see fig. 11) into the centre of the carriage in the upper part of the chamber, locating the front edge over the guard plate on the funnel position, and place the prepared mould (on a support platform in necessary) in the lower chamber. NB – *do not use any form of support that might inflate under vacuum.*

Decide on the pattern and sizes of hose and any connectors that may be needed, keeping the runs as short as conveniently possible.

Prepare the hose outlets, fixing to both funnel and mould. Ensure that you obtain a good fit, but one that is not too tight. Leave no end open.

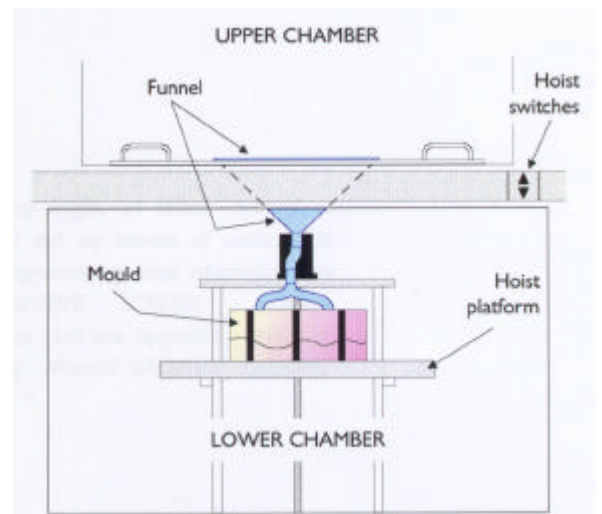


Fig. 11 Arrangement of the mould and accessories

### PREPARING THE RESIN

Two- or three - component resins should be prepared in accordance with the supplier's instructions and placed in the appropriate cups.

Although casting may be carried out without them, it is recommended that cup liners be always used.

For general guidance, refer to the manual *Vacuum Casting Technique: a guide for new users* supplied with the machine.

### FITTING THE CUPS AND PADDLE

Fit the cups into their cradles, ensuring always that component 'A' is in cup 'A' (the upper right cup).

- Place cup A in its cradle, engaging the spout with the V-shaped cut-out. Ensure that the lip of the cup (and that of its liner, if used) is beneath the lip of the retaining clip.
- Remove the paddle from its clip (above cup B).
- Pull open the retainer assembly (with V-shaped cut-out) for cup B. Slide the cup B into the cradle, ensuring that the lip of the cup (and that of its liner, if used) is beneath the lip of the retaining clips at the side and rear of the cradle. Close up the retainer place, keeping the spout of the cup in the V-shaped cut-out, and lock it by turning anti-clockwise the knob at its left.

Re-fit the paddle by sliding it into its holder, ensuring that it is fully engaged by the spring-loaded ball.

**BEFORE BEGINNING A CASTING, ALWAYS HAVE READY THE APPROPRIATE SOLVENT FOR CLEANING UP RESIDUAL RESIN.**

# WORKING PROCEDURES

---

## 1. TO MAKE THE MACHINE READY FOR USE

Switch on the machine at the isolator.  
Press the blue re-set button (the inside of the chamber is now illuminated).

The machine is now ready for use.

ALWAYS CHECK THAT BOTH RESIN COMPONENTS – AND THE  
MOULD – ARE IN POSITION BEFORE ATTEMPTING TO MIX AND  
CAST

## 2. OPERATING MODES

The machine can be operated entirely in manual mode or auto mode (Fig. 13).

KEEP YOUR HANDS OUT OF THE VACUUM CHAMBER WHILE  
ANY OF THE MECHANISMS ARE OPERATING

## 3. OPERATING IN MANUAL MODE

Select the manual screen.

Press 'Pump' to begin chamber evacuation.

Press 'Speed' to select the mixing speed.

Press 'Run' to start the mixing of part B.

Once the vacuum time has been achieved, stop the mixer.

Press 'A' cup down, allowed resin 'A' to drain into cup 'B'

Press 'A' cup up.

Re-start the mixer.

When the mixing is complete, stop the mixer and tilt cup 'B' by pressing its DOWN button. Allow it to drain before pressing the UP button to return cup 'B' to up position.

When the pouring is complete and the resin has settled, press the SLOW LEAK button. The slow leak will start to force the resin further into the mould. This should be continued for up to 30 seconds, after which pressing the FAST LEAK button will release the remaining vacuum fully, forcing the resin completely into the mould.

## 4. USING THE AUTOMATIC OPERATION SEQUENCE

With the mould, accessories and resin components all in place close the chamber doors.

Select required program

Go to AUTO REPLAY

Start the program.

## 5. STOPPING IN AN EMERGENCY

To deal with unforeseen or unplanned steps in operation (for example, forgetting to load with a resin component, or an apparent malfunction as a result of faulty programming):

Operate the red STOP button (it will lock into place)

The machine is now completely shut down: nothing with operate.

## 6. RE-STARTING AFTER EMERGENCY

Rotate and release the red STOP button  
Press the blue re-set button  
Press 'Esc' to return to the main screen.

The machine can now be operated again. Gain access to the chamber after first operating the FAST LEAK control to release the vacuum. It will then be possible to correct any fault before continuing.

## 7. SHUTTING DOWN

Complete shutdown: turn off the power supply at the isolator switch.

### **AFTER CASTING – A REMINDER**

*Remove the cups and liners, the funnel and the pipes as soon as possible and clean them out with the recommended solvent, ready for re-use.*



## CONTROL PANEL TOUCH SCREEN FUNCTIONS

### Title Screen

The MCP type 'PLC' vacuum casting machines are controlled by a touch-sensitive screen, which first appears in the form of fig. 12. *Please note that only the lightest of touches is required: do not press the screen unnecessarily hard.*

Touching the screen at any point of this display produces the menu screen of Fig. 13.

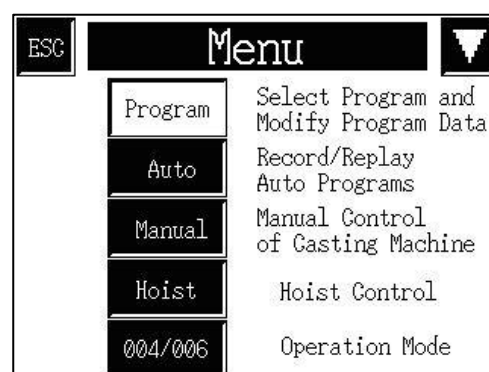


Fig. 12

### Menu Screen

Note: the **ESC** button at the top left corner recalls the display last show, while the 'down' arrow at the top right calls up the next screen in a sequence. *These buttons have the same functions on whichever screen they appear.*

Any of seven function screens – briefly introduced below, and described fully on the pages indicated – can be called up by touching the appropriate button on the **Menu** screen. The next four are on a separate screen, reached



by touching the arrow button.

### PROGRAM

Touching the **Program** button produces the Select program screen (*page 18, Fig. 16*), from which an existing program may be selected. The selected program may then be either operated or modified, as desired.

### AUTO

Touching Auto invokes the **Auto replay** screen (*page 21, Fig. 26*), with its two alternatives. The first monitors a running program, while the second allows a program to be recorded and stored.

### MANUAL

The **Manual** button leads to the **Manual control** screen, (*page 23, Fig. 36*), from which the operator has step-by-step control.

Functions available from **Menu** screen (continued)

The second screen, reached by touching the arrow button at the top right corner, is shown in Fig. 14

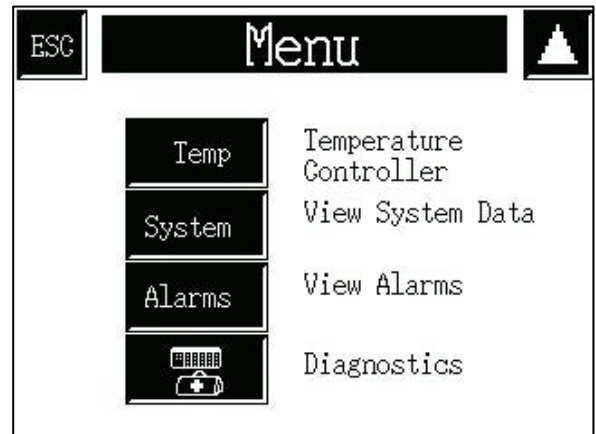


Fig. 14

## TEMP

Access to the temperature control screen for cup 'B' is possible only when the option is actually fitted (see *Appendix, page 23*). If the option is not fitted, the screen in Fig. 15 appears when the **Temp** button is selected.

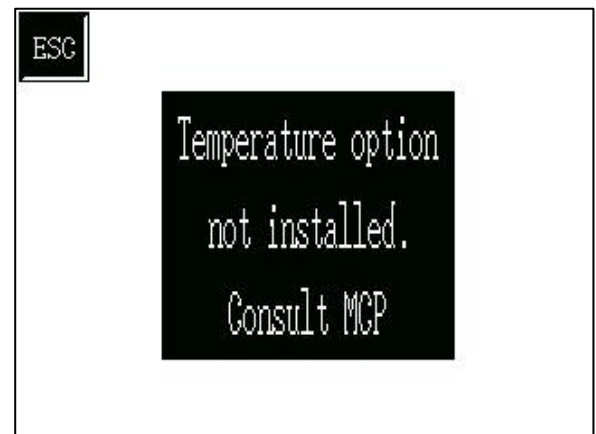


Fig. 15

## SYSTEM

The **System data** screen (*page 24, Fig. 37*) displays information about running times of the machine and the mixing speeds (which can be altered at the screen) currently programmed.

## ALARMS

The **Active alarms** screen (*page 24, Fig. 38*) shows any current alarm operation. Records of previous alarm operations are also available from the screen.

## DIAGNOSTICS

The Diagnostics screen shows the actual PLC input and output states. This is only used to assist with any system fault diagnosis. A battery health lamp warns of the PLC lithium battery condition. If the PLC detects that the internal backup battery has failed the lamp will clear.

## THE PROGRAM SELECTION SCREEN

Touching **Program** on the **Menu** screen invokes the screen shown in Fig. 16, from which one of five alternatives may be chosen (apart from **Menu**, which returns control to the menu screen)

No program can be run from this screen, or any of its subsidiaries: control must first be returned to the **Menu Screen**.



Fig. 16

### VIEW PROGRAM

The **View program** option displays the **Program data** screen of Fig. 17.

This is simply a display of the currently selected program, not modifiable from this screen. The **Select program** screen can be regained by touching **ESC**.

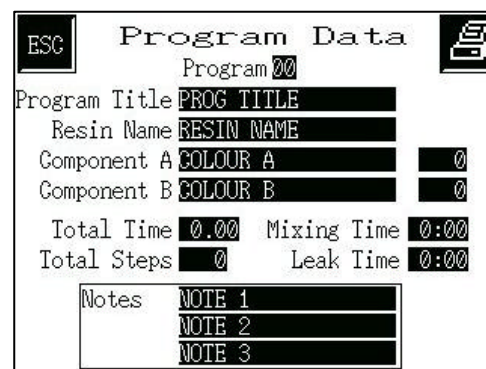


Fig. 17

### SELECT PROGRAM 00

The **Select program** option (Fig. 18) displays the programs that are stored and currently available.

Touching the arrow button at the top right toggles between similar screens, each with ten stored program options.

Select by touching the appropriate button. After indicating your choice, touch **ESC** (once or twice, as required) to return to the **Select program** screen, and again to display the **Menu** screen.

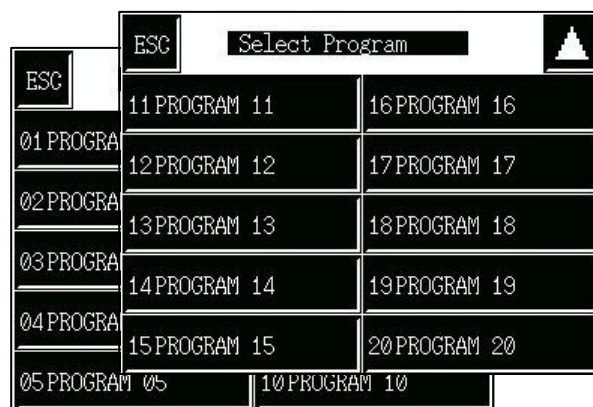


Fig. 18

### EDIT PROGRAM DATA

The third choice from the **Select program** screen – available only when a program has already been selected – is **Edit program data**. The user is first asked to choose between UK and HEK resins. When the user makes the selection the screen on the right is displayed.



Twenty popular types of resin are shown on the screen (Fig. 19), any of which may be selected for substitution in the already-chosen program; in this case, a series of screens will appear to allow various modifications. When the resin to be used is not shown, the **Other** button will allow an alternative type to be used in the selected program.

ESC		Select Resin	Other
8145	6075	8165	8175
8400	2140	2150	8040
2160	6020	SG95	6091
8050	8051	8070	8090
FR 300	9010	8055	

Fig. 19

**EDIT PROGRAM DATA – continued**

*STANDARD resin type*

Selecting a standard resin type first produces the screen of Fig. 20, on which the intended weight of the resin casting is entered by means of the  and  buttons.

The weight may be registered by touching the return button at the bottom right corner, after which the screen of Fig. 21 appears.

Each screen that follows in this sequence has an up and a down arrow key to (respectively) return to the previous screen or to proceed to the next.

The current title of the program already selected appears (always in capital letters) on the bar above the keys, and it can be edited if necessary.

Touching **Clear** will remove the existing title, which may then be replaced. Single characters may be removed by the backspace key. The **Num** key toggles the number pad on and off, highlighting the numbers on a red background when it is operative, allowing numbers to be included at will. **SPC** gives a space marked by an underline.

The program components are selected by means of the down arrow button, and appear in the following order below the **Program** bar:

- Colour of component 'A'**
- Colour of component 'B'** (as required)
- Notes – 1, 2 and 3** (as required)

The complete description suite is finally registered by touching the 'carriage return' key at the bottom right corner to show the screen of Fig. 21. Either choice will return the display to the **Select program** screen (Fig. 16). The entries will appear thereafter on the **Program data** screen (Fig. 17) whenever it is invoked for the particular program.

*'OTHER' resin type*

When a resin is to be used that does not appear on the standard list, touching the **Other** button produces the **Edit program** data screen of Fig. 20. Here, the actual weights to be used of each separate component must be entered (remembering always to identify component 'B' with cup 'B' in the casting machine).

The carriage return button moves control to the **Edit program** screen (Fig. 20), from where the procedure may be continued. After an initial screen on which the resin name must be entered, procedure is the same as for a standard resin type.

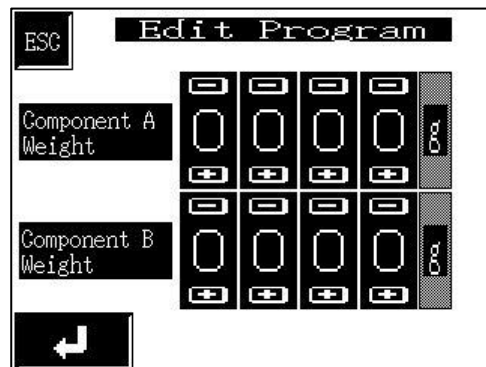


Fig. 20



Fig. 21

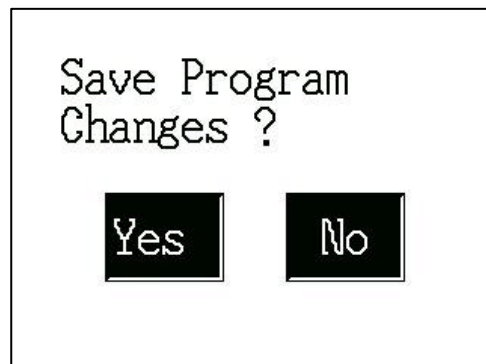


Fig. 22

**EDIT PROGRAM**

**WARNING** – the purpose of the **Edit program** facility is to display steps in a program already registered. The displayed program may also be edited, but **only an experienced operator should undertake such a task.**

The fourth choice from **Select program** displays the screen of Fig. 23. The left-hand column displays the step numbers of the selected program from 00 to 09 : four further, similar screens display subsequent steps, also in batches of ten, up to no. 49 (the maximum for a program is 50 steps, including 00). The arrow button at the bottom right corner changes to the next display : intermediate screens have two button, for forward and backward movement.

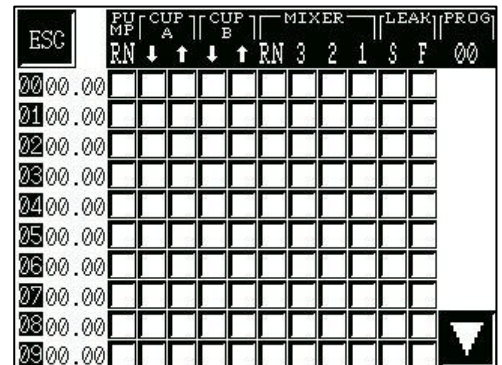


Fig. 23

The buttons in the main body of the display have an on/off toggle action, a blacked out button indicating that a function is active as the step commences. The explanation of the eleven abbreviated column headings is as follows:

PU MP	CUP A	CUP B	MIXER			LEAK	
RN	↓ ↑	↓ ↑	RN	3	2	1	S F
Pump switch	Cup movements (up/down)		On	Fast	Med.	Slow	Slow Leak Fast Leak

The second column across the screen displays the program time, which must elapse before the step occurs. The time may be altered by touching it on the screen, which changes the display to that of Fig. 24 (where a number pad has been superimposed by touching the 00.00 adjacent to step 14). The time is accepted by touching the return button, after which further times may be adjusted, or the keypad display hidden.

**WARNING: subsequent times are not altered automatically and must, when necessary, be changed manually.**

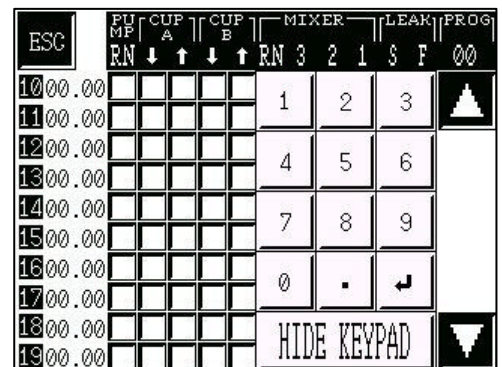


Fig. 24

When all entries are completed, the **ESC** button on the current display shows the screen of Fig. 25, where the changes may be confirmed by the **Yes** button, or rejected by the **No** button. Either choice returns control to the **Select program** screen (Fig. 16).

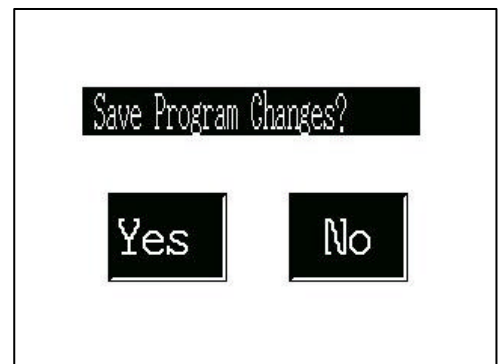


Fig.25

## NEW PROGRAM

The final choice from the **Select program** screen is **New program**, which is used to install functions with a resin already selected and for which the component weights are already specified.

The program name and number should already have been selected. The first display to appear (Fig. 26) requires the length of the first period of mixing to be entered (the default is one minute).

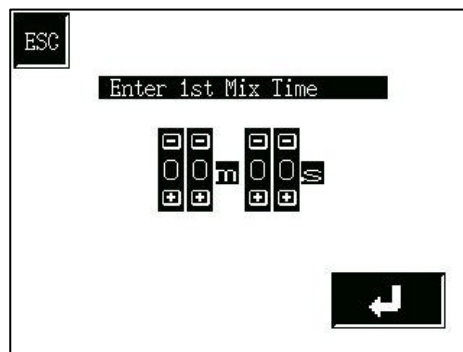


Fig. 26

When the time has been correctly entered, it may be registered by means of the carriage return button, which reveals the display of Fig. 27, on which the rotation speed of the mixer must be specified. The default speed for the mixer is 1 (low speed).

After selecting the preferred option (the button turning from white to black), it may be confirmed by means of the carriage return button, which displays a screen similar to that of Fig. 26, but requiring the second mixing period to be entered. Again, the default is one minute: if a second period is not needed, the time should be set to zero.

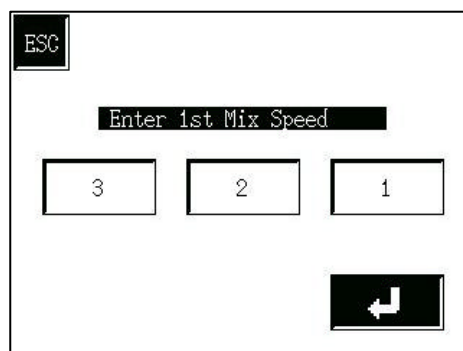


Fig. 27

After confirming the second mixing period by touching the carriage return, a fourth display, similar to that of Fig. 27, appears for entry to be made of the mixer speed.

When the second mix speed has been selected, the following screen asks for a **Leak Time** to be entered.

The carriage return on this fifth display brings up the screen of Fig. 28, where the changes may be confirmed by the **Yes** button, or rejected by the **No** button. Either choice returns control to the **Select program** screen (Fig. 16).

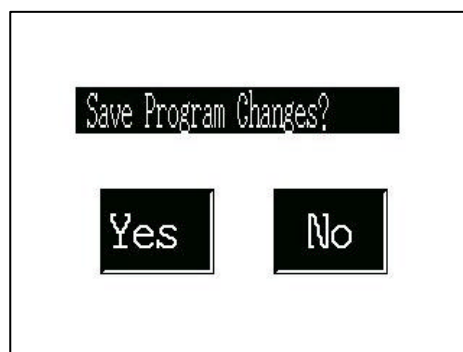


Fig. 28

## AUTO RECORD AND REPLAY

On touching the **Auto** button at the **Menu** screen, the **Auto replay** screen (Fig. 29) appears, displaying the name of the program already selected.

The program may be run as it stands, or it may be replaced by recording over it. The latter option is not a modification, but requires a complete new sequence to be entered.

Two buttons – the 'Play'  and **Auto record** – flash when the screen is opened.

One of the other of these options must be chosen before continuing.

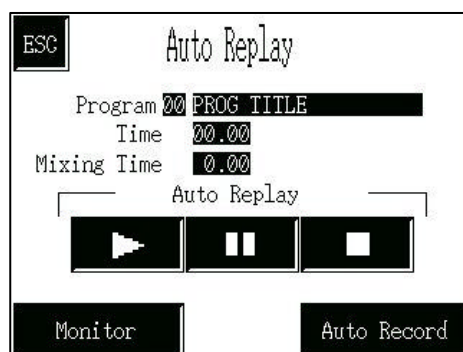





Fig. 29

## AUTO REPLAY

Three buttons control the automatic replaying of a selected program :

-  the 'play' button begins the program immediately :
-  the 'pause' button stops the program temporarily :
-  the 'stop' button returns the program to the beginning.

Touching the **Monitor** button (Fig. 29, page 22) enables progress of the program to be followed.

The full bar beneath **Pump** indicates progress during initial evacuation of the chamber, completion being shown by the **OK** button.

A lamp indicates an operation in progress. In the example shown, the pump is running, while the program time yet to elapse is 5 min. 23 sec. And the mixer has been running at medium speed for 31 sec. *Note: the counter runs forward during recording, but backward during replay.*

The end of the sequence (normally, when the vacuum has been completely released) is indicated by the appearance of the **Auto replay** display of Fig. 29 (page 22). The **ESC** button on this screen also returns control to the display of Fig. 29.

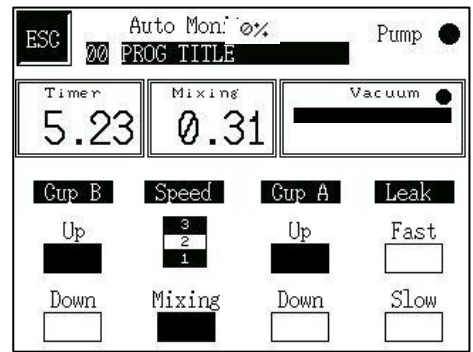





Fig. 30



Fig. 31

## AUTO RECORD

Selecting **Auto record** from the **Auto replay** screen brings the display of Fig. 32, where:

-  the 'stop' button ends and deletes the recording;
-  the 'auto record' button starts program records;
-  the 'pause' button temporarily halts recording.

The program already selected will usually need to be eliminated by touching the **Erase** button, which produces the confirmatory display of fig. 33.

The **No** button, like the **ESC** button, returns control to the previous screen (fig. 25, page 20).

The **Yes** button also returns to the previous display, but the 'auto record' button now flashes, prompting the operator to initiate a recording sequence.



Fig. 32

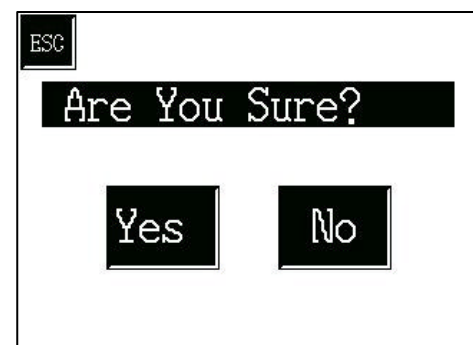


Fig. 33

## AUTO RECORD (continued)

After confirming the start of recording by touching the flashing button, **Show controls** (flashing) displays the **Auto recording** screen (Fig. 34). From this screen it is possible to record. From this screen it is possible to record the new sequence of actions, *but not to change the data on the resin\**.

Any button showing on this screen may be used, changing to black when active (the **Up** button for each cup opens in black, indicating the starting position). In the example of Fig. 34, the pump has been running for 1 min. 3 sec., not yet sufficient for evacuation (shown by the bar beneath **Vacuum**) to be complete.

To record the program it is necessary only to operate the various controls at the appropriate moments. The actions taken are indicated by changes in the button colours, while times elapsed are all indicated automatically. The program steps have a resolution of one second: in other words, a one-second increase in program time must elapse before the next step begins (for example, a one-second delay must occur between changes of mixer speed).

A maximum of fifty program steps (00 to 49) is possible. At the last of these steps, the **Memory Full** warning display appears (Fig. 35). *It is extremely unlikely that this condition will occur in normal practice.*

The final steps of a sequence will be:

- Switch off the pump;
- Slow leak on;
- Fast leak on;
- Slow leak off;
- Fast leak off.

After the last step has been entered, the **ESC** button is pressed to return control to the **Auto record** screen, on which the 'stop' button, seen to be flashing, must be touched to terminate the sequence. The program may now be deleted (e.g. if a mistake is believed to have been made) by touching **Erase**, when a new recording attempt may be carried out : or it may be accepted by selecting **Save**.

The **ESC** button now returns control to the **Auto replay** screen, from which the program may be replayed. Alternatively, the **Menu** screen may be selected where, if necessary, the resin data may now be changed\*.

## MANUAL CONTROL OF MACHINE

On touching the **Manual** button at the **Menu** screen, the **Manual control** display of Fig. 36 appears.

With the mould mounted and the resin components already weighed out into the cups, a sequence may be run under complete manual control from this screen. The resin type and weight do not need to be entered before beginning.

The operations are exactly as already described for **Auto record**, and must include the same final steps of the sequence.

When casting is complete, **ESC** returns control to the **Menu** screen.

\*see EDIT PROGRAM DATA (page 18)

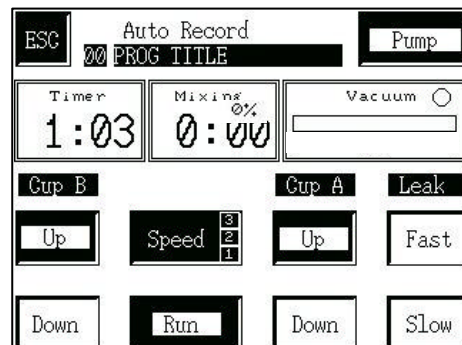


Fig. 34

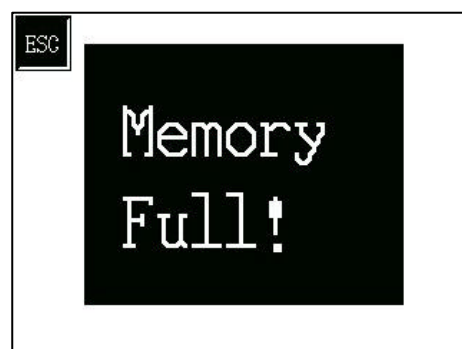


Fig. 35

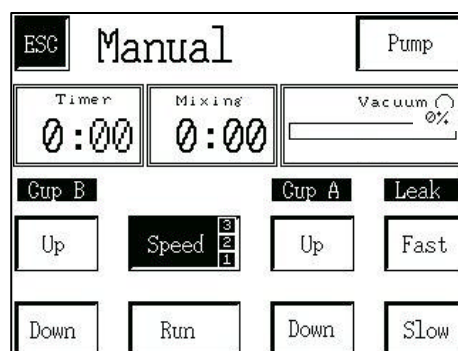


Fig. 36



## SYSTEM DATA

Selecting the **System data** display from the **Menu** screen reveals data relevant to maintaining the machine.

The **Run time** shown is re-settable. It should be set to zero when the pump oil is changed, and is then useful in determining the proper time for the next change. If the **Reset** button is selected, the **Are you sure?** screen (Fig. 37) appears.

The **Total Run Time** approximates the total operating time of the machine, which is in fact the length of time for which the vacuum pump has been operated. Since the machine will seldom be operated to any significant extent unless the chamber is under vacuum, this provides a reasonably good estimate.

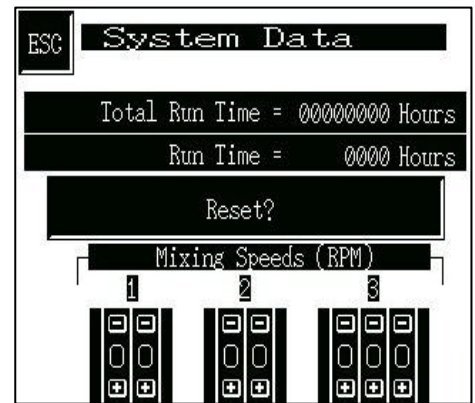


Fig. 37

## MIXER SPEEDS

The maximal values for the mixer speeds are the settings in place when the machine is delivered:

<b>1</b>	<b>2</b>	<b>3</b>	
49	99	160	(r.p.m.)

The settings may be adjusted in the usual way to values appropriate to the task in hand, and when the **Menu** button is invoked the new current values will be recorded.

## ALARMS

Malfunctions and program faults cause an alarm condition, which can be investigated by examining the **Active alarms** display (Fig. 38). Note that in certain conditions, this display may appear at start-up.

## FAULT CONDITIONS

In the example shown, use of the emergency button has been automatically recorded. Other fault conditions, which may have occurred, are similarly recorded.

## VACUUM PUMP

It is recommended that the oil in the vacuum pump should be changed every 500 hours and among the fault conditions is a warning that the time limit has expired. When the limit has been exceeded, an attempt to operate the machine will cause the **Active alarms** display to appear with the message 'Pump run 500 hours'. This does not prevent further use of the machine, but is a regular warning that the pump oil should now be changed which will recur until the **Run Time** has been re-set at the **System data** display.

## HISTORY OF FAULTS

Touching the **History** button produces the display of Fig. 39, which lists the alarm conditions that have occurred, with the time and date (without the year) also indicated.



Fig. 38



Fig. 39

# APPENDIX

## SYSTEM DATA

The screen displayed having pressed the TEMP button on the Menu screen will depend on the options included in your machine. If only the Heated Cup option is fitted, then the screen shown in Fig. 41 will be displayed, if the Heated Oven option is fitted then the screen in Fig. 43 will be displayed, if however, both options are fitted then the screen shown in Fig. 44 will be displayed.

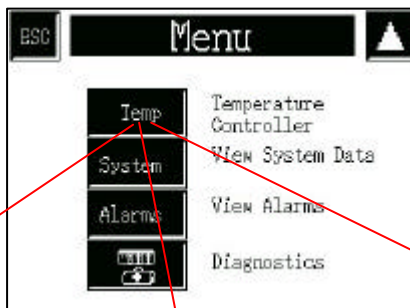


Fig.40

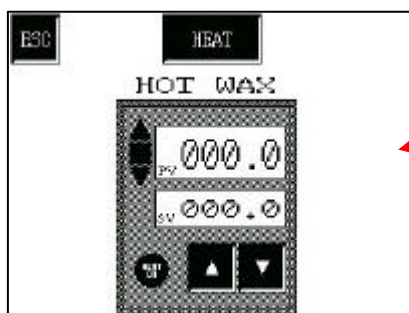


Fig. 41

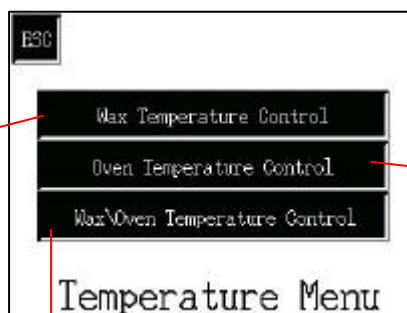


Fig.42

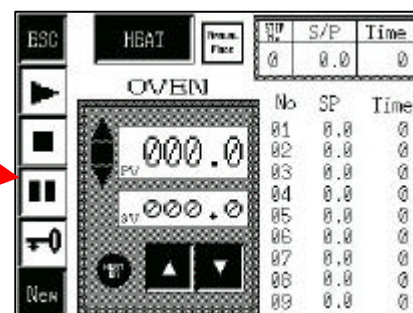


Fig.43

If both options are fitted then the screen shown to the right will be accessible from the Menu above. This screen allows the user to view and operate both temperature control loops concurrently.

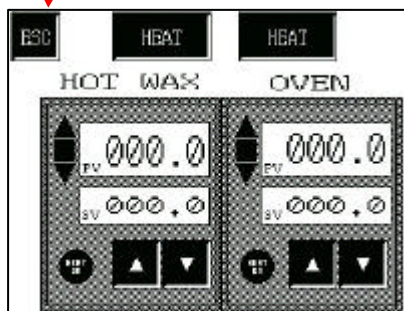


Fig.44

## HOT WAX CONTROL

The screen shown in Fig.41 displays the control for the Hot Wax (Heated Cup) temperature. The current temperature of the cup is displayed in the upper window (PV) in centigrade and the lower window displays the set value (SV) also in centigrade.

The two buttons under these windows allow the user to raise or lower the set value. The value will scroll in either the up or downward direction as long as the button is pressed. The heater is turned on and off by the HEAT button at the top of the screen. The round lamp (HEAT ON) to the left of the raise/lower buttons indicates this.

Three further lamps to the left of the PV window indicate the direction of the actual temperature in relation to the SV, e.g. if the temperature is low, the down arrow will be lit.

## OVEN CONTROL

The screen shown in Fig.45 displays the control for the Oven temperature. The current temperature of the oven is displayed in the upper window (PV) in centigrade and the lower window displays the set value (SV) also in centigrade.

### Manual Mode

The two buttons under these windows allow the user to raise or lower the set value. The value will scroll in either the up or downward direction as long as the button is pressed. The heater is turned on and off by the HEAT button at the top of the screen. The round lamp (HEAT ON) to the left of the raise/lower buttons indicates this.

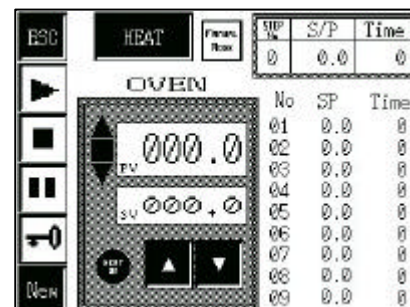


Fig.45

Three further lamps to the left of the PV window indicate the direction of the actual temperature in relation to the SV, e.g. if the temperature is low, the down arrow will be lit, when the temperature is at the set point the centre square lamp will be lit.

### Automatic Mode

However, this screen allows the user to define a temperature profile which the oven will follow for up to nine steps. This gives the user a greatly enhanced control over the oven temperature over time. This profile can then be saved and re-used as required. The set up and use of the profile feature is described below.

#### Entering Profile Elements

The display shows the current values for each step on the right of the screen. These values are edited using a 'pop-up' keypad. The keypad is activated by use of the 'Key' button on the lower left of the screen. Values are then entered on the keypad. The current value being edited will have a flashing box around it. When the desired value has been entered, pressing the Enter key will accept the value and move the box (cursor) onto the next value. The order in which they are edited are as shown on the screen, i.e. Temperature set point then time.

It should be noted that not every step has to be used. If a step is not required, then simply enter zeros for both temperature and time. Also, should a temperature be entered but the time entered as zero, the step will not be used and will simply move onto the next step.

Once the profile has been edited the 'Hide' button closes the keypad.

#### Running a Profile

Once a profile has been edited and the keypad closed, the user can then run the new profile. This is done using the standard PLAY button (Right Arrow). Once the PLAY button has been pressed, the oven temperature will follow the profile. The current step, set point and time can be seen in the top right of the screen. Whilst running the PLAY button will flash.

At any time during playback the user can pause the profile by pressing the PAUSE button. This will hold the profile in its current state until the PAUSE button is pressed a second time. Whilst in Pause mode, the button will flash.

The profile will end when all 9 steps have been completed. Alternatively, the STOP button can be pressed at any time to stop the profile and reset it. When PLAY is pressed again, the profile will start from the beginning.

**Saving a Profile**

When a profile has been edited and checked to be correct, the user can save the current profile for use again. This is done using the NEW button. This takes the user to another screen asking if they wish to save or not. Pressing YES saves the profile details to memory and takes the user back to the previous screen. Pressing NO takes the user back to the previous screen without saving.

Pressing the ESC button takes the user back to the Heated Cup/Oven Menu screen.

# ROUTINE MAINTENANCE PROCEDURES

---

*Apart from keeping the unit in a generally clean condition, routine maintenance of the Vacuum Casting Machine is concerned with the vacuum pump and its associated filters. Users are referred to the Service Manual for other repair or replacement procedures.*

- \* Before carrying out any operation on the vacuum pump or its filters, allow the equipment to stand idle for at least one hour.
- \* Never use any oil but the correct grade as recommended.
- \* Check the oil level regularly. The optimal frequency depends greatly on usage and should be set after observation at short intervals (e.g. daily or weekly) during the first periods of use.

## OIL CHANGES

The first oil change for a new pump should be made after 150 hours of operation.

The period between subsequent changes may be varied to match actual usage. Assuming a full working week of forty hours, MCP Equipment suggest that the oil be changed at intervals of three months, corresponding to 520 hours (refer to the maintenance schedule in the pump manufacturer's manual in case of any doubt). Longer periods allow the build-up of sludge and other deleterious matter, which may shorten the life of the pump by causing excessive wear.

A copy of the pump manufacturer's manual is supplied with the casting machine. For the user's convenience, the following instructions summarise the procedure for maintenance of the pump, but the manual itself should be consulted for explicit instructions for changes of oil and/or filter as well as other cleaning operations.

1. Remove the oil filler cap from the top of the pump
2. Open the drain tap at the bottom left of the pump, and allow it to drain (through a hose) into a suitable receptacle.
3. When the oil-flow appears to have ceased, operate the pump for **no more than thirty seconds** with the vacuum chamber doors open.
4. Close the drain tap and put in one litre of fresh, clean vacuum pump oil. Replace the filler plug.
5. Close the vacuum chamber doors and operate the pump for three or four minutes, to flush out residual deposits.
6. Repeat operations 1, 2 and 3.
7. Close the drain tap and refill the pump with fresh, clean oil to the gauge on the sight window. Replace the oil filler cap.

Operating the machine in very humid conditions can cause moisture to be drawn into the vacuum pump, where it will form a layer of water at the bottom of the sump and cause the level to rise about the gauge line. If you notice this effect (which is most easily discernible after a period of non-use, such as over a night), drain off the layer through the drain tap to bring the oil down to its correct level.

# DECLARATION OF CONFORMITY

---

Manufacturer's name and address: MCP EQUIPMENT  
(A DIVISION OF MINING & CHEMICAL PRODUCTS LTD.)  
UNIT 8, WHITEBRIDGE INDUSTRIAL ESTATE,  
STONE  
STAFFORDSHIRE ST15 8LQ

Equipment type and designation: Vacuum Casting Machine  
Type MCP 4/06 and variants

Serial Number: .....

Directives/Regulations to which the equipment conforms:

1. Council Directive 89/392/EEC and its amending directives, leading in the United Kingdom to The Supply of Machinery (Safety) Regulations (SI 1992 No. 3073) (as they apply to equipment with a moving part and intended for treating or moving material).
2. Council Directive 89/336/EEC and its amending directives, leading in the United Kingdom to The Electromagnetic Compatibility Regulations (SI 1992 No. 2372).
3. Council Directive 73/23/EEC and its amending directives, leading in the United Kingdom to The Low Voltage Electrical Equipment (Safety) Regulations (SI 1989 No. 728).

Safety standard to which the equipment uses:

BS 2771 : Part 1, as applicable to the electrical and electronic equipment of machines not portable by hand when working, used in industrial production and operated from a supply up to 1000 V a.c. (equivalent to European standard EN 60 204). The equipment also complies with the essential Health and Safety requirements.

Person responsible for Technical File: Simon Scott,  
Manager for Technical Data – MCP Equipment Division